

## Plate Heat Exchanger - Pass Plate Configuration

Pass plates are a type of plate used to change the direction of a fluid. The standard pass plates are listed below:

### Flow Direction Down



A1004



A0230



A1204



A1034



A0234



A1230



A0034



A1200



A1030



A0204



A0004



A0030



A0200



A1000

### Flow Direction Up



B0230



B1004



B0234



B1230



B1204




B1034



B1200



B0034

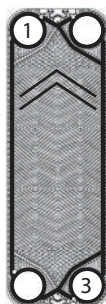

B1030




B0204



B0200



B1000

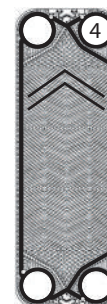

B0004



B0030